

PR7 Password Protected Quick Start Guide



Camera and LED Overview



Status	LED 1	LED 2	LED 3	Indication
Not docked				Camera is off
		Solid Green		Camera is on, pre-record is off
	Flashing Blue			Camera is on, pre-record is on
	Flashing Green			Camera is recording
	Flashing Red			Camera is recording, battery or storage is less than 15%
	Flashing Red	Flashing Green		Camera storage is full
			Flashing Blue	Camera has footage in its storage
			OFF	Camera has no footage in its storage
Docked, connected to PC	Solid Red			Camera is ready to be unlocked
	Solid Green			Camera is unlocked
	Flashing Red			Videos are being transferred or deleted
		Solid Red		Camera is charging
		Solid Green		Camera is fully charged
Docked, connected to power		Solid Red		Camera is charging
		Solid Cyan		Camera is fully charged but there is still footage in storage
		Solid Green		Camera is fully charged and there is no footage in storage
			Flashing Blue	Camera has footage in its storage
			OFF	Camera has no footage in its storage

Charging

Charge your device before first use.

The camera takes approximately 4 hours to reach full charge.

To charge, simply place your PR7 in the charging dock supplied.



Please use the wall plug and charging cable supplied with the PR7. Charging via a computer USB slot or using aftermarket charging cables will make the charging time longer.

 
 
 
The LED display on the front of the dock indicates the battery level of the PR7. The indicator LED on the top of the PR7 will also display **RED** when charging and it will turn **BLUE** when fully charged with footage on the camera and **GREEN** when fully charged with no footage on the camera.

PASSWORD PROTECTED CAMERA MANAGEMENT SOFTWARE

Installing the Pinnacle Response Camera Management Software allows for viewing and downloading saved photos and videos, changing device settings, syncing date and time and also protects your footage with password protection.

Software Requirements: Windows 7, 8, or 10 operating system Hard drive storage for archiving video (1TB recommended)

1. Open the Camera Manager Software on your computer. Connect camera to computer via USB cable. Your camera will power on and get connected to the computer.
2. There are 2 user types:
 - A) General User: This mode allows for viewing and downloading media files only. The default password is: 000000.
 - B) Administrator: This mode allows for changing device settings as well as viewing and downloading media files. The default password is: 888888
4. Password can be changed and reset for users by the Administrator account.
3. After login, the Camera Management Software will open on the Camera Info tab.
4. Click "Open File Explorer" to get access to camera SD card mass storage. Users are able to check, copy or delete files.

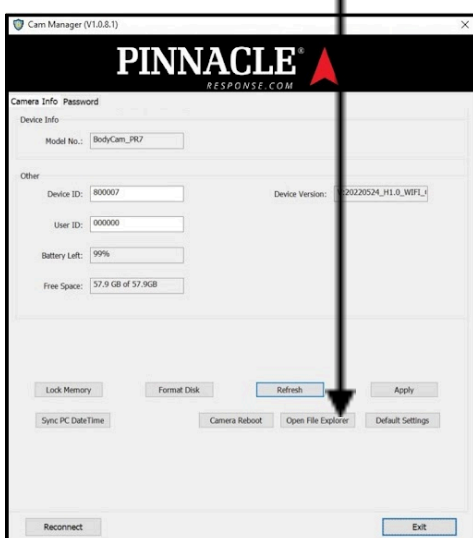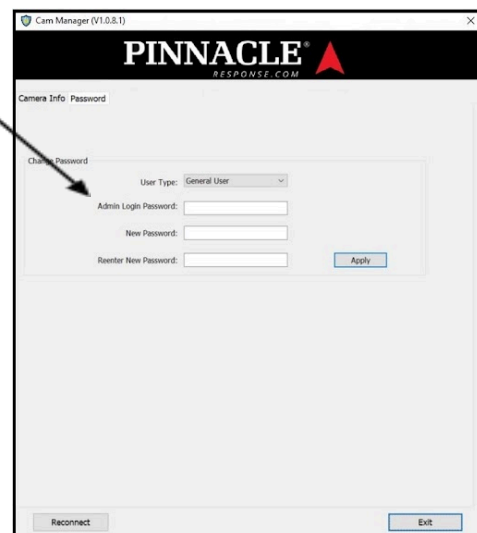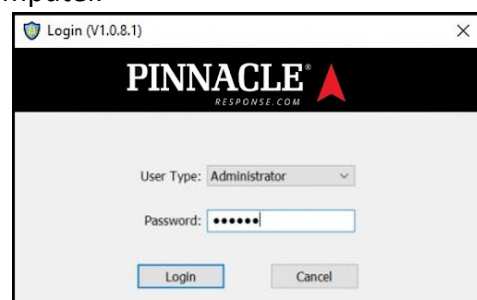

Recording

To start recording with your PR7, slide down the Record Shutter Switch on the front of the camera marked “AUDIO VIDEO”. When recording has started the Indication LED 1 will flash **GREEN**. To cease recording, slide the shutter back up to the off position. If you have less than 15% storage capacity, then LED 1 will flash **RED**.

Troubleshooting

To reset the camera please hold both the red and black buttons on the side of the camera for 5 seconds. If this does not resolve the issue, please contact us at support@pinnacleresponse.com

