

PR7 Full Encrypt (Onboard) Quick Start Guide



Camera and LED Overview

Status	LED 1	LED 2	LED 3	Indication
Not docked				Camera is off
		Solid Green		Camera is on, pre-record is off
	Flashing Blue			Camera is on, pre-record is on
	Flashing Green			Camera is recording
	Flashing Red			Camera is recording, battery or storage is less than 15%
	Flashing Red	Flashing Green		Camera storage is full
			Slow Flashing Blue (once per 5 seconds)	Camera is searching for WiFi (manual uploading)
			Fast Flashing Blue (once per second)	Camera is connected to WiFi and is attempting to upload (manual uploading)
			Solid Blue	Camera is uploading (manual uploading)
			OFF	Manual uploading turned off, or manual uploading complete
Docked, connected to PC	Solid Red			Camera is ready to be unlocked
	Solid Green			Camera is unlocked
	Flashing Red			Videos are being transferred or deleted
		Solid Red		Camera is charging
		Solid Green		Camera is fully charged
Docked, connected to power		Solid Red		Camera is charging
		Solid Cyan		Camera is fully charged but there is still footage in storage
		Solid Green		Camera is fully charged and there is no footage in storage
			Slow Flashing Blue (once per 5 seconds)	Camera is searching for WiFi
			Fast Flashing Blue (once per second)	Camera is attempting to connect to WiFi
			Solid Blue	Camera is uploading
			OFF	Uploading complete / no footage to upload



Charging

Charge your device before first use.

The camera takes approximately 4 hours to reach full charge.

To charge, simply place your PR7 in the charging dock supplied.



Please use the wall plug and charging cable supplied with the PR7. Charging via a computer USB slot or using aftermarket charging cables will make the charging time longer.

The LED display on the front of the dock indicates the battery level of the PR7. The indicator LED on the top of the PR7 will also display **RED** when charging and it will turn **BLUE** when fully charged with footage on the camera and **GREEN** when fully charged with no footage on the camera.

Recording

To start recording with your PR7, slide down the Record Shutter Switch on the front of the camera marked "AUDIO VIDEO". When recording has started the Indication LED 1 will flash **GREEN**. To cease recording, slide the shutter back up to the off position. If you have less than 15% storage capacity, then LED 1 will flash **RED**.

Standard Uploading Options

Direct upload via your
sites wifi



Direct upload via a 4G
router



If the above options do not work for you please let us know and we can tailor a solution for you

Viewing the footage

All footage is uploaded via the options above to DEMS which is hosted on the cloud. To access this log in to DEMS at <https://dems.pinnaclearresponse.com> and enter in your username and password.

Troubleshooting

To reset the camera please hold both the red and black buttons on the side of the camera for 5 seconds. If this does not resolve the issue, please contact us at support@pinnacleresponse.com

